

YDM 3109



Digital door locks

User Manual

Keep this manual safe for future reference

GATEMAN®

The functions and design of this product can be changed without notice for quality improvement.
Chinese manual is from 33 page. (中文说明书从第33页)


Please read the following before using your Yale GATEMAN product

- This product is designed and manufactured to assure personal safety. Improper use can result in personal damage or property loss. Please observe the procedures for installation, use and servicing.
- Yale GATEMAN is a precision electronic device. All safety and operating instructions should be read before the product is operated.
- Refer all servicing to qualified service personnel. Servicing is required when the product is damaged or to be re-installed.
- Check your installation conditions with the local service provider before installation as your door prep might be different from the standard this lock conforms with.
- The products warranty does not cover defects or damages arising from the door defects, improper installation, lack of or improper maintenance, improper storage, shipping and handling, ordinary wear and tear, misuse, abuse, accident, unauthorized service or use with unauthorized service parts.
- Disassembly, rework and reverse engineering are prohibited without a written approval of Yale except for a normal installation of the product.
- The trademarks, trade names, designs, copyright, patents and other proprietary right used on or embodied in the product and this manual shall remain the exclusive property of the manufacturer, cannot be copied or used in any form without the written authorization by Yale.
- Visit our website www.yalelock.com for more information on the products.
- The information in this manual is subject to change without notice.



IMPORTANT SAFETY INSTRUCTIONS

Please read the following safety instructions to prevent any accident, property damage and inconvenience. Children should be well educated for the operating instruction. Keep this manual in a convenient place so that you can refer to it when necessary.

 **Caution** must be followed to protect yourself and your property.



Note explains product functions and features.




prohibited




must observe




Yale GATEMAN digital door lock is a precision electronic device.

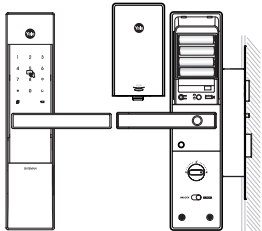


Clean only with dry cloth. Do not use water that can cause damage to the electronic circuit.

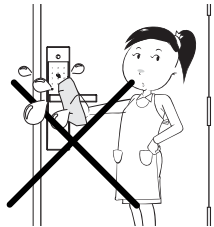

Do not attempt to disassemble the unit by yourself. That can cause an electronic shock and product damage.

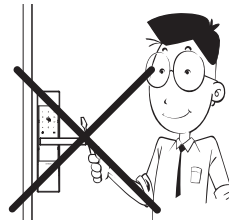


When you move, contact your local service personnel for re-installation. Check the service charge with your service provider.

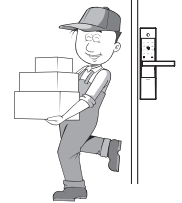


⚠ Caution



Do not use an inappropriate tool that can cause damage or malfunction of the product.

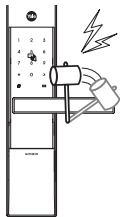

 
Handle the unit with care. Excessive force, careless handling may cause product damage.




Be careful not to have an unauthorized user know your security code. Change your code periodically.




Do not use water and any type of solvent such as gasoline or benzene as they can cause damage to electronic circuit, deterioration and/or paint peel-off.

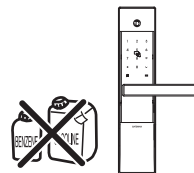


Do not have your card key lost or stolen. Immediate re-registration of all remaining keys is required to invalidate the lost key.

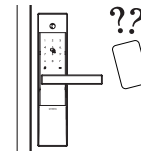


Educate your children about the proper use of the product.

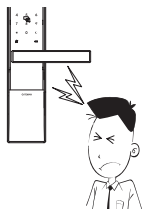

Make sure the door is securely locked whenever you leave your house, especially in the manual lock mode.

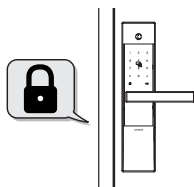


Make sure the distance between the door and door frame is not widened more than 5mm.

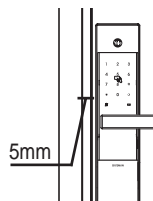

Keep card key reader part clean and dry. Dust off dirt smoothly with a soft cloth.



Remove all of the batteries before installing or removing a remote control module.

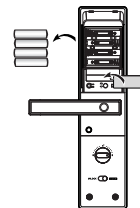

I Overview

Proximity card identification

You can use your ISO 14443 A type RFID card such as credit card or pass card as your card key.

Triple access

You can unlock the door by the card, the security code or the mechanical key at your convenience. You do not need to worry about accidental lockouts by losing or forgetting the key.

Easy re-registration of keys

If you lose a key, you can invalidate the lost key by re-registering all other keys. You can register up to 40 card keys to add users.

Anti-collision

Contacting multiple cards does not cause error to the lock. The card key reader will recognize the card key among a pack of cards.

Easy and simple operation

One-touch operation allows every user including children and senior the simplest use.

Automatic locking

Just closing the door will automatically lock the door. Manual operation is also available.

Break-in / Damage alarm

80dB alarm will go off if anyone attempts to damage the lock or forces the door open.

Safe handle

Protects from any break-in attempts through the safe handle.

Verification with the palm

The security code is verified by palm touching to randomize any fingerprint residues on the keypad so protect from exposing it.

Emergency power supply

When the batteries are completely discharged you can easily supply emergency power to the lock with the 9V battery.

Volume control

You can change the volume. The break-in alarm still operates even if the silent mode is on.

Forced lock mode

Internal forced lock prevents anyone to unlock from the outside and external forced lock makes only manual thumbturn available to open the lock from the inside.

Remote control

You can use a remote control by installing the applicable Remote control module. (This option may not be available depending on your country or local dealer.)

Smart Pad

Keypad displays functional operation with lighting.

Basic Operation



 
Please do remember below operation!

1. Card Key Registration



Press [I] button Contact all the keys you wish to register on one by one Press [I] button


2. Security Code Registration



Press [I] button Enter the security code (6-12 digits) Press [I] button


3. Locking the door from the outside

The automatic Lock Sensor detects the door closing and locks the door within 5 seconds, or Touch the keypad with palm for locking the door in [M] [Manual Lock Mode]

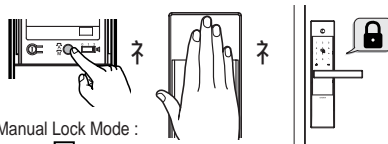

Manual Lock Mode :
Press [M] Button.

 
4. Unlocking the door from the outside



Wake up the lock with the palm touch, enter the security code and retouch the lock with the palm.



5. Automatic / Manual Lock Mode

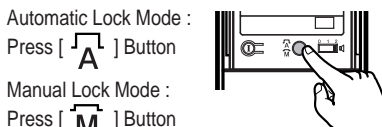

Automatic Lock Mode :

 
Press [A] Button

Manual Lock Mode :


Press [M] Button

6. Forced Locking

Forced Lock Mode from inside.



Forced Lock Mode from outside.

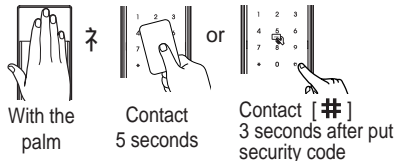


With the palm

Contact 5 seconds

Contact [#] 3 seconds after put security code

 7. Volume control



Mute : [Volume] Button

Normal : [Volume] Button

Loud : [Volume] Button

8. Turning off the alarm


Contact the card key on [card key reader], or

Enter the security code, or

Press and hold [I] button for 5 seconds

9. Emergency power supply

9V Battery can be used to supply electricity to the unit.

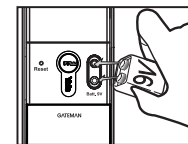

CONTENTS

1 Specifications	08	4 Option	
2 Identification of Product	09	1. Remote control module	27
3 How to use		2. Remote control	28
1. Registering Card Keys	11	5 Cautions	
2. Registering Security Code	13	1. Emergency power supply	30
3. Locking the door from the outside	14	2. Lost card key	31
4. Unlocking the door from the outside	15	3. Product malfunction	31
5. Locking the door from the inside	17	4. Emergency mechanical key override	32
6. Unlocking the door from the inside	17	6 Chinese Manual (中文简单说明书)	33
7. Enabling/disabling Safe handle	18		
8. Automatic / Manual Lock Mode	20		
9. Forced Lock Mode	21		
10. Break-in / Damage alarm	22		
11. Wrong-try Lock-out	23		
12. Volume control	24		
13. Battery use & Replacement	25		
14. Displaying operation status (Smart Pad)	26		

1 Specifications


Parts		Specifications	Remarks
Front (Front Body)		68.6(W) x 306.6(H) x 27(D)(70.6)mm, Zinc die-casting	Operating temperature : -15~55 (5~131 °F)
Back (Main Body)		72.8(W) x 306.6(H) x 37.0(D)(80.8), Flame-Retardant ABS, Zinc D/C	
Lever		Zinc die-casting	
Card Keys		4 EA	Up to 40 keys (sold separately)
Battery		4EA 1.5V AA alkaline batteries (Operating voltage: 4.5 ~ 6 V)	Last up to 10 months (10 times used a day)
Lock case		Steel and SUS304	
Option	Remote Control	Wireless	Optional

Battery life may vary depending on temperature, moisture levels, frequency of use and the quality of the batteries.
 Please make sure that all parts are included when purchasing the product.
 Optional products may not be available depending on your country or local dealer.

Basic Contents



 Front (Front Body)




Back (Main Body)



Lock case

- 4 Card keys
- Emergency keys
- Screws
- Installation Template
- 4 Batteries
- Users Manual

 Option





Remote control




Remote control module

2 Identification of Product

1. Front (Front Body, install on the outside of the door)

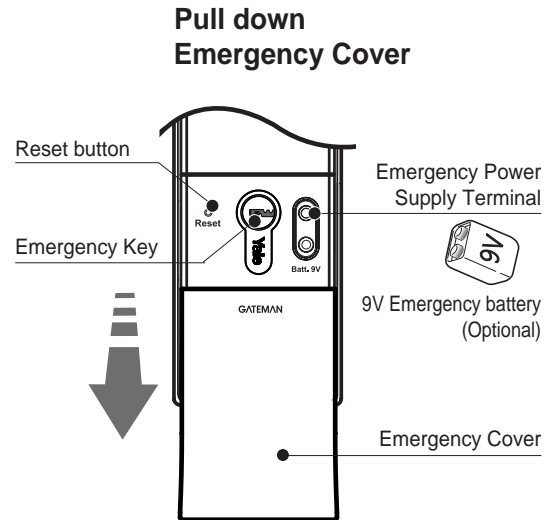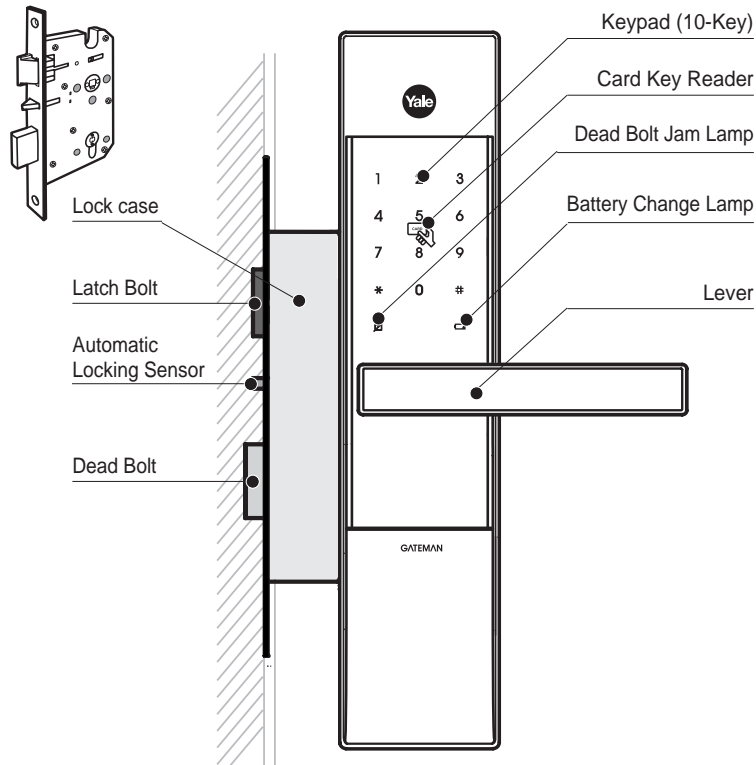

2. Back (Back Body, install on the inside of the door)

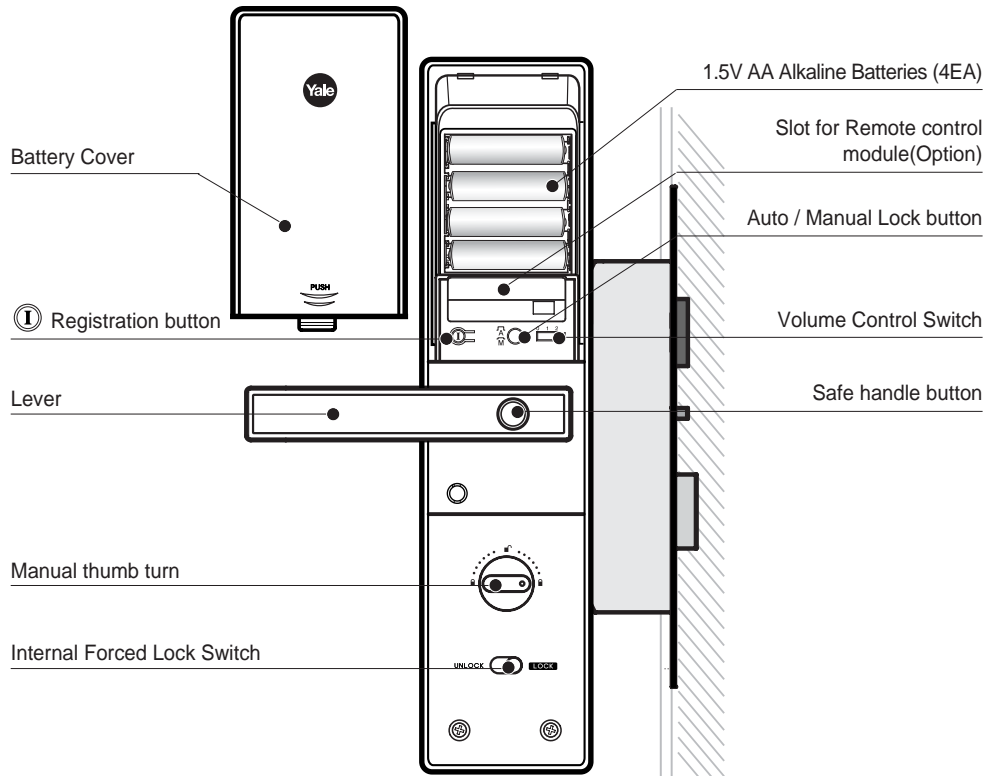

3 How to Use

1. Registering Card Keys

⚠ Caution

Keep the door open while you register card key to prevent yourself from accidentally getting locked out.




Note

Basic 4 keys + $\frac{\text{Additional}}{\text{maximum}}$ 36 = 40

4 card keys are provided at purchase and you can register up to 40 card keys.



Contact your local dealer for additional card keys.

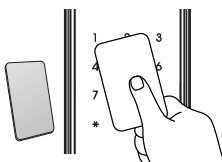

If you lose your current card key, re-register all the remaining keys to invalidate the lost key.




ISO 14443 A type RFID card can be registered as your card key.

⚠ All card keys should be registered at a time.

1

Press **I** [Registration] button

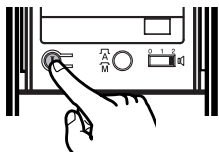


Open [Battery Cover] and Press **I** [Registration] button.



If it takes too long (over 7 seconds) to contact a card key after pressing **I** [Registration] button, the card will not be registered.

2

Contact all the card keys you wish to register on the [card key reader] one by one

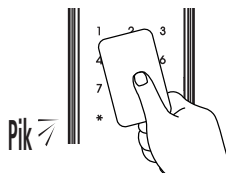


If you hear a “pik” sound, the card keys are registered. If you hear a “ti-to-ti-to” sound, the card key had been already registered.

- The numbers of registered cards are shown on the keypad.

3


Press **I** [Registration] button

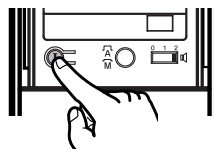

The registration is completed with a “pi-bi-bing” sound.

4

Check the key operation

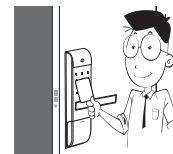

Opening the door with your card key. Contact your card key to [card key reader]

Opening the door with your card key

Touch the keypad with the palm ↗ Contact card key

2. Registering Security Code

⚠ Caution

Keep the door open while you register the security code to prevent yourself from accidentally getting locked out.



(6 digits)

(12 digits)


000000 ~ 000000000000

Set a code of 6~12 digits using the number buttons

The old code is automatically deleted when registering a new code.

1

Press ① [Registration] button

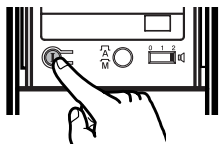


Open [Battery Cover] and Press ① [Registration] button.



If it takes too long (over 7 seconds) to enter the code after pressing ① [register security code] button, the code will not be registered.

2

Enter your security code

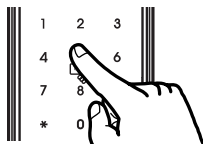


Enter the code you wish to register. (6~12 digits)



< * > and < # > buttons can not be used for security codes.

3

Press ① [Registration] button

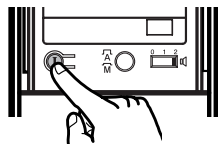

The registration is completed with a “pi-bi-bing” sound.

- When registering the security code, it shows what the user has just registered in order.

4

Check your security code

Once registration is completed, make it sure to open the lock with your new security code.



Opening the door with your code



Touch with the palm [keypad]
↕ Enter security code ↕
Touch with the palm [keypad]

3. Locking the door from the outside

Please check Automatic / Manual Lock Mode



Automatic lock mode

The automatic lock sensor detects the door closing and locks the door automatically within 5 seconds.

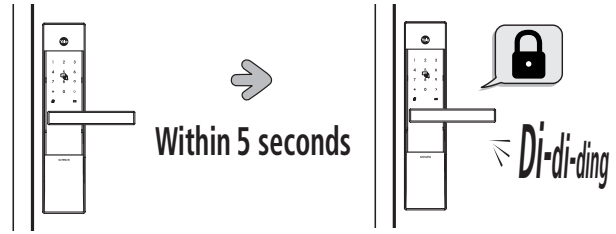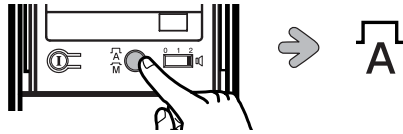

Manual lock mode

The door locks when touch the keypad with the palm.

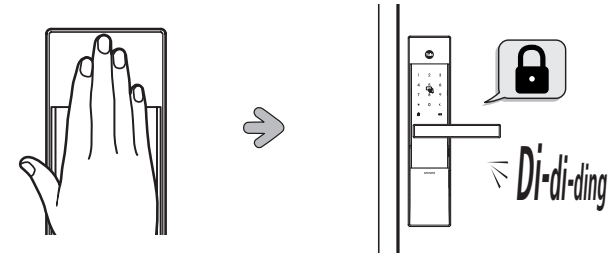
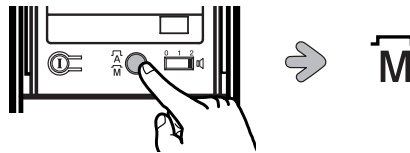


⚠ Caution




As the automatic lock function does not work in manual lock mode, make sure to check that the door is securely locked when leaving the premises.

4. Unlocking the door from the outside

Unlocking the door with card key

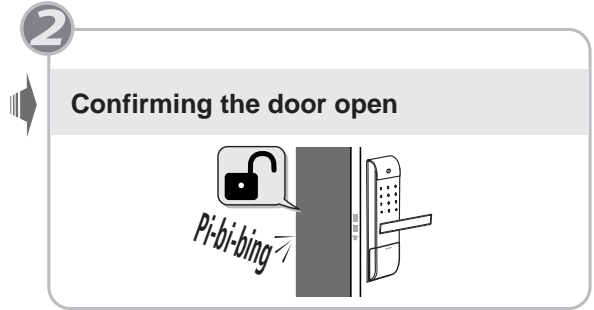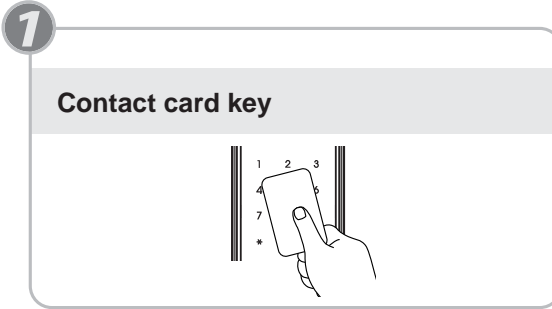

Security code (Normal)

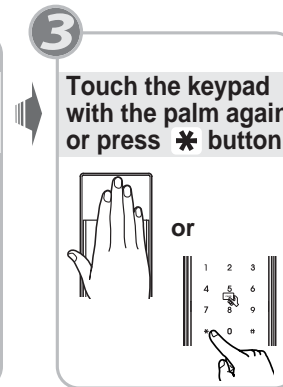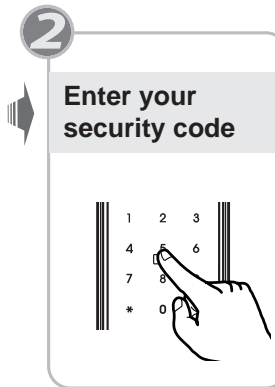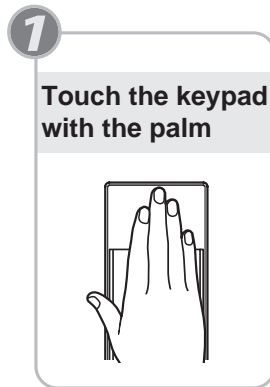


- The keypad cannot be operable in case of wearing the glove.
- Using the palm or pressing * button do the same function after entering the security code.
- If the card key does not work properly, please contact the card key after touching the keypad with the palm.




Opening the lock by the fake PIN code

- This explains how to open the lock with the fake PIN code.

Opening the lock by the fake PIN code

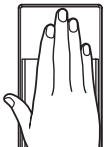- 1 Touch the keypad with the palm**

 Please slightly touch the exterior keypad.
- 2 Press any number (fake PIN code) and the right PIN code**

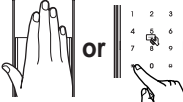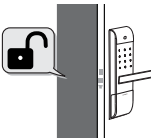Fake PIN code	Right PIN code
or	
Right PIN code	Fake PIN code


Caution
 - This feature is not working when the lock is locked down due to wrong-try lock-out delay.
- 3 Touch the keypad with the palm or press * button**

Please slightly touch the exterior keypad or press * button to finish.
- 4 Confirming**

Pi-bi-bing
The lock is unlocked with melody ("Pi-bi-bing")

Caution

- When any incorrect PIN codes are inputted five times in a row, it turns the lock down for three minutes.
- When this function is on, the user cannot use the fake PIN code function until any normal verification through key, card, fingerprint, PIN code, or opening the lock from inside is made. So, the user is encouraged to use the right PIN code without any fake number to verify the lock.




- Use the fake PIN code feature whenever there is any chance of exposing the right PIN code to others.

5. Locking the door from the inside


Automatic lock mode

When set on automatic lock mode, the automatic lock sensor detects the door closing and locks the door automatically within 5 seconds.

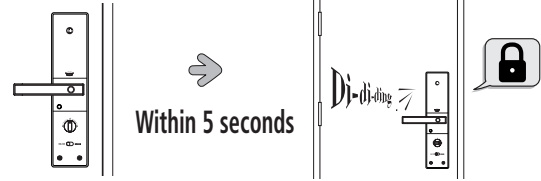

Manual lock mode


Use [manual thumb turn] on the back body.

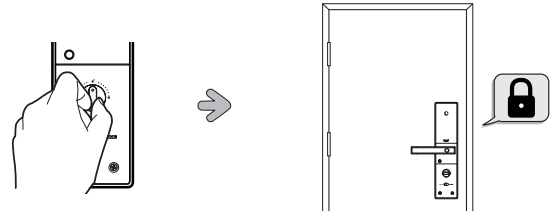


6. Unlocking the door from the inside

Down the lever while pressing the Safe handle button

Down the lever while pressing the Safe handle button

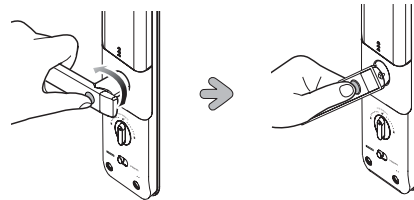

Turn the manual knob

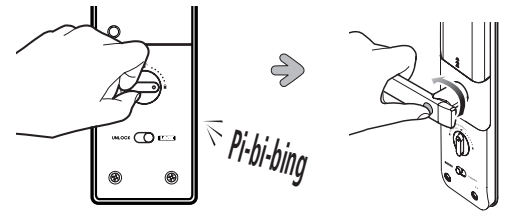


7. Enabling/disabling Safe handle


GATEMAN YDM3109 protects from any break-in attempts through the Safe handle button.

Factory default : Enabled status

Enabled status

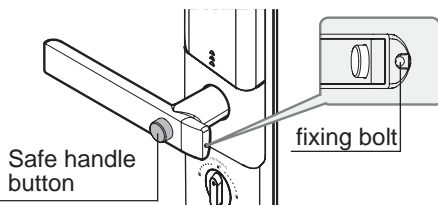


Disabled status

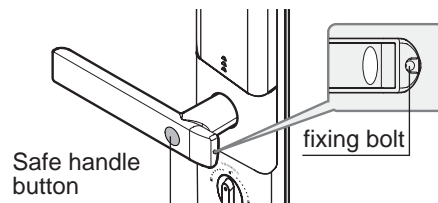


Disabling Safe handle

Take out the hexagon wrench which is docked in the battery cover.

 The hexagon wrench




Turn the fixing bolt on the side of the inner lever to the right while pressing the Safe handle button.

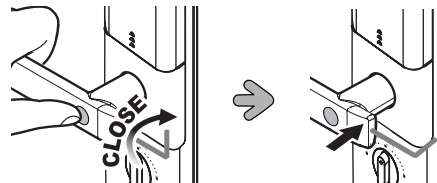


Enabling Safe handle

Take out the hexagon wrench which is docked in the battery cover.

 The hexagon wrench



Turn the fixing bolt on the side of the inner lever to the left until the Safe handle button pops out.

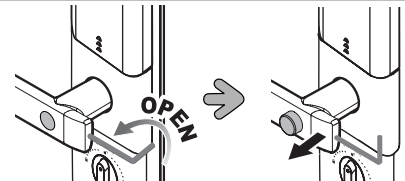


Caution

Be careful not losing the fixing bolt when you loosen it to set the feature on.

Egressing when the Safe handle egress button is on


1

Down the lever while pressing the Safe handle egress button

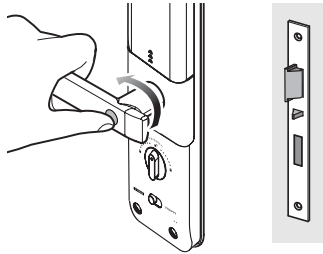

2

Example

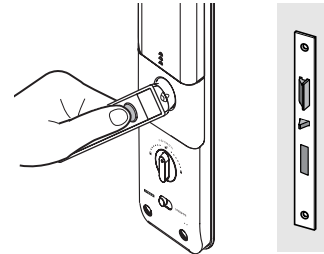


⚠ Caution



- The locking bolt would not be retracted in case of not pressing the button.
- When the fire detection sensor is on, the feature is still on so the user must follow the usual procedure to open the door.

8. Automatic / Manual Lock Mode


Automatic locking sensor which detects the door closing and automatically locks the door in 5 seconds. Automatic lock mode is a factory default setting.


Setting it on automatic lock mode

Push up the Button on  Mode.

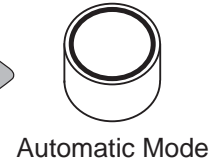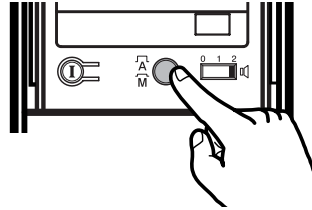

Setting it on manual lock mode

Push down the Button on  Mode.

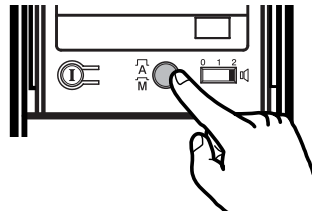

9. Forced Lock Mode


External forced lock mode

Setting external forced lock mode on with the card key

1

Contact card key

Contact the card key on [card key reader] for 5 seconds until you hear 3 beeps.

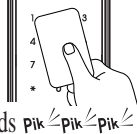


5 seconds pik \swarrow pik \swarrow pik

2

Confirming external forced Lock


External forced lock mode is set on with "Di-ri-ric" sound.



Setting external forced lock mode on with the security code


1

Touch the keypad with the palm




2

Enter the security code

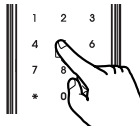

3


Press # button for 3 seconds until you hear 3 beeps

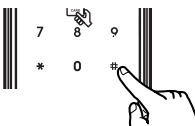

4

Confirming external forced Lock


External forced lock mode is completed with "Di-ri-ric" sound.



Internal forced lock mode

When internal forced lock mode is on, the keypad is not functioning.

A warning beep sound will go off if anyone attempts to verify by the security code or the card from outside.

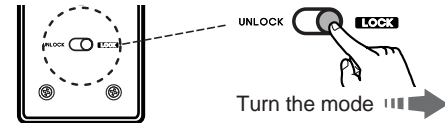

10. Break-in/Damage alarm


80dB alarm goes off when the lock is damaged or anybody breaks in by force while the door is locked.



Turning off the alarm


(Choose one of the four options below.)

Enter your security code

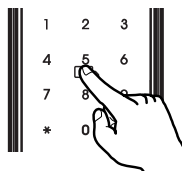


OR

Contact your card key

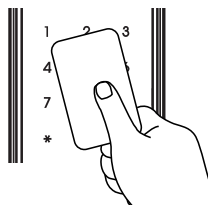


OR

Press and hold **I** [Registration] button for 5 seconds

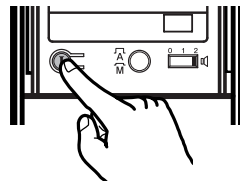

OR


Press  [Unlock] button on the remote control

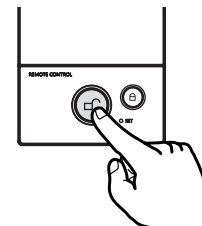


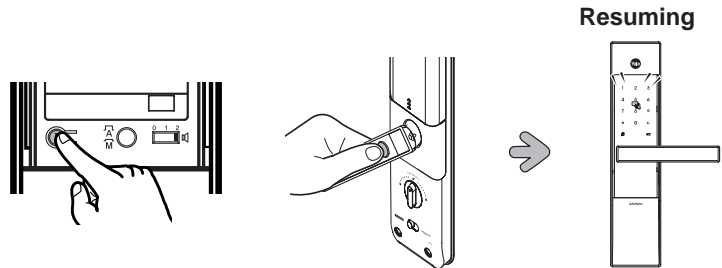
11. Wrong-try Lock-out

No keypad function is available during this wrong-try lock-out delay. The break-in and damage alarm work regardless of this function.

- If incorrect security codes or unregistered card keys are attempted 5 times in a row, it will lock out for about 3 minutes with the blinking LED.

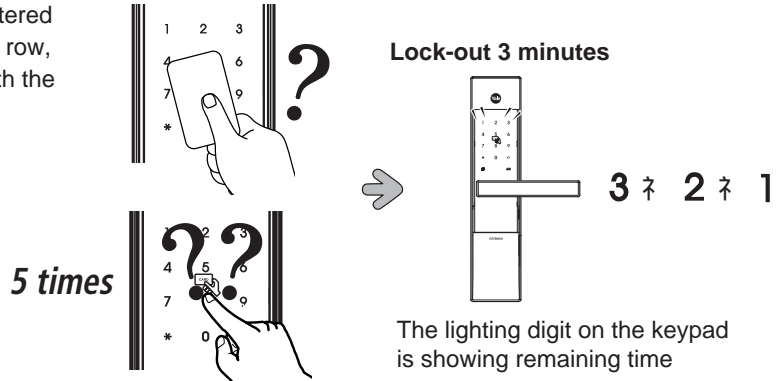

- The system will resume the operation automatically after 3 minutes of lock-out. If you press  [Registration] button on the back body or down the lever while pressing the Safe handle egress button, it resumes the operation.




12. Volume control

This function can control the operating sounds so that the door can be opened and closed without disturbing others.


Silent Mode

Setting the volume Button on “0”

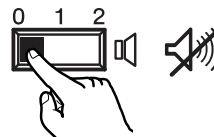


Normal Mode

Setting the volume Button on “1”

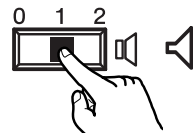

Loud Mode


Setting the volume Button on “2”

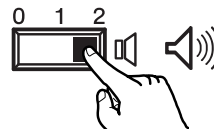


13. Battery use & Replacement

Battery life (stand alone)

This product uses 4 1.5V alkaline AA batteries which can be used approximately 10 months on the condition of 10 times open/close cycles per day.

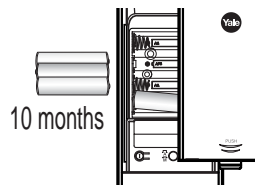

 1.5V AA size alkaline battery





Battery life may vary due to temperature, moisture, frequency of use, and the quality of the batteries.

Battery replacement warning

Replace all 4 batteries when the low battery warning melody rings and the LED turns red. (Use authentic alkaline batteries)


1

 The LED turn red

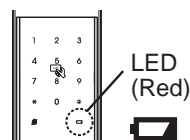


2

Do not mix new and used batteries.

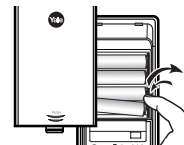


⚠ Caution

- Always check + and - directions when inserting batteries.
- Use the authentic alkaline batteries. It is a user's responsibility for damage caused by using unauthentic batteries.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.

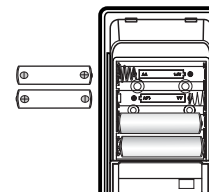

14. Displaying operation status (Smart Pad)


Battery Replacement warning

 Battery Icon lights on.




External / Internal forced locking

Starting from the left column, the LED comes on from left to right to left for twice.

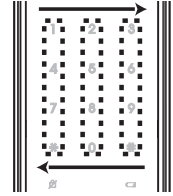


Dead Bolt locking motion warning

 Locking Icon lights on.



Break-in / Damage warning

The LED keeps coming on to the clockwise when a break-in or damage is happened. (Alarm lasts for 30 minutes)

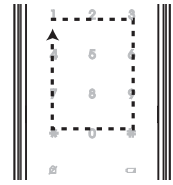

Wrong-try Lock-out warning

If incorrect security codes or unregistered card keys are attempted 5 times in a row, it will lock out for about 3 minutes with the blinking LED.



Wrong-try Lock-out warning starts

3 3 minutes remaining

2 2 minutes remaining

1 1 minute remaining

Security Code registration

When registering the security code, it shows what the user has just registered in order.


(Right : In case of registering 1, 2, 3, 4, 5 and 6)



Card Key registration

When registering the card keys, Keypad displays the number of registered card keys.


(Right : **3** is on 3 keys have been registered)

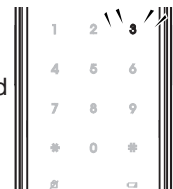

4 Option


1. Remote control module

Remote control module should be installed in advance to use remote control. Open [battery cover] and insert the module into the slot. Proper functioning of the module can be checked by operating a remote control.

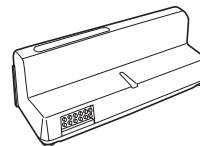

- Remote control module :
Required for the use of
remote control

Installing remote control module

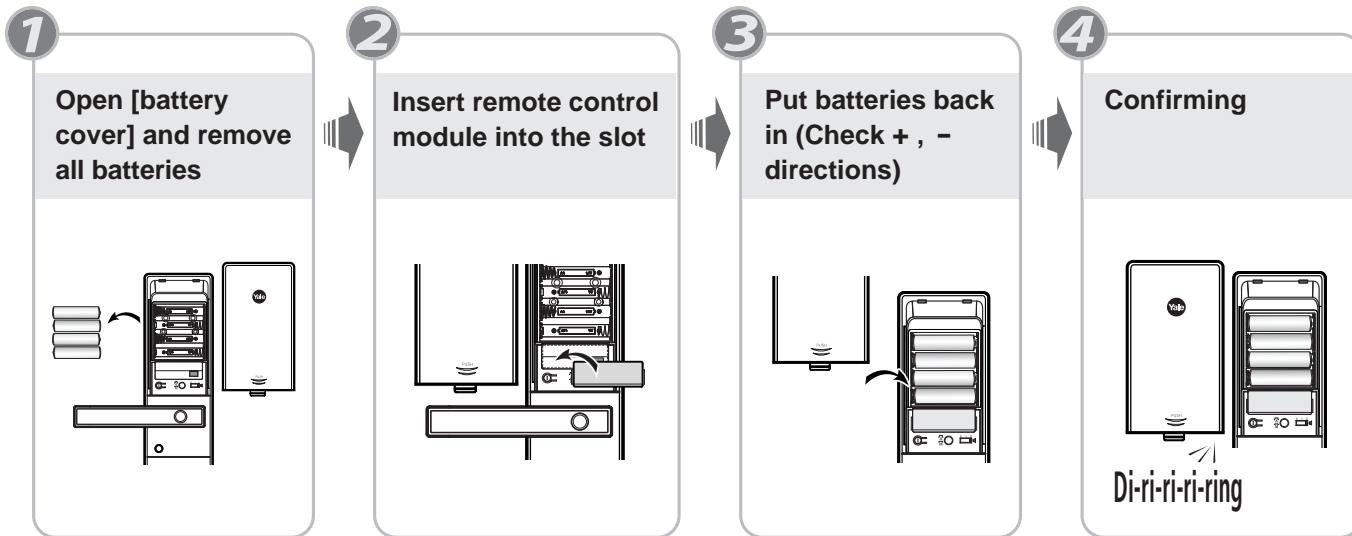


2. Remote control


The remote control is an FSK(Frequency Shift Keying) type that uses a Floating ID encoding system, which changes the wireless code each time you use it, so that there is no risk of hacking. It is non-directional and the operational range is up to 10~20m.


Caution! The operational range may vary depending on the installation environment.
Re-registration automatically deletes the previous registered remote control.

Registering remote control


- Press **I**
[Registration] button

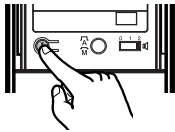

- Press **# , 0 , 5**
buttons

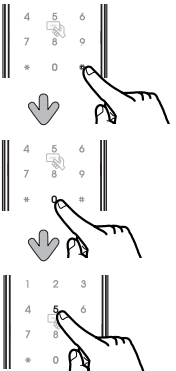
- Press [Registration]
button located on the
front of the remote
control with a pin

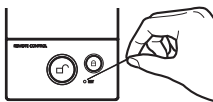


You can register up to 5
remote controls
consecutively. In order to
register consecutively,
press [Registration] button
on each remote control
with 10 second intervals.
Remote control makes a
beep when it is properly
registered.
- Press **I**
[Registration] button

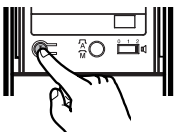
- Check remote
control operation

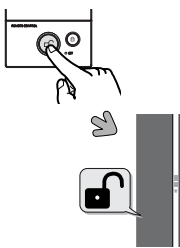

Press [open] or
[close] button to
check the
operation


Deleting remote control registration

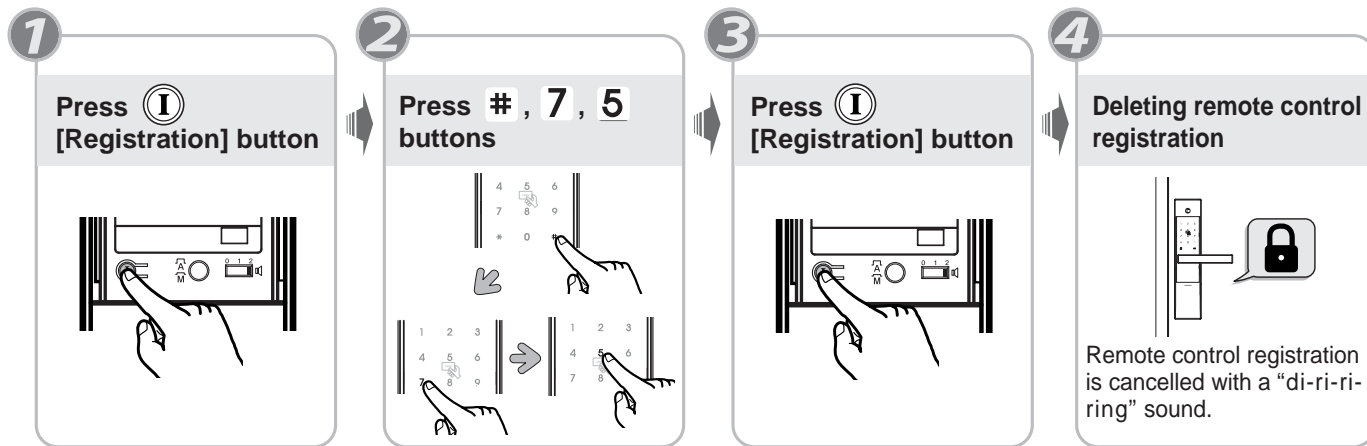

How to use the remote control


Locking the door

Press **Ⓛ** [close] button, and the door will lock within 2~3 seconds.

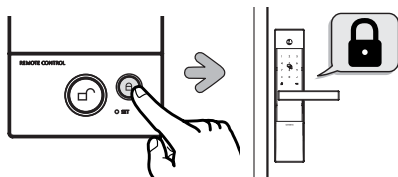


Unlocking the door

Press **Ⓞ** [open] button, and the door will unlock within 2~3 seconds.

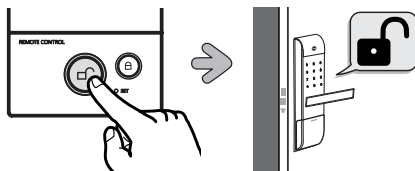

Changing the batteries




Open up the battery cover at the back of the remote control and change the batteries.

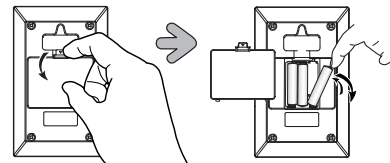


5 Cautions


1. Emergency power supply


In case the batteries are completely discharged 9V battery can be used to supply electricity to the unit. Unlock with the card key or security code while contacting a **9V battery** just like the below instruction. Discharged batteries should be replaced right away.

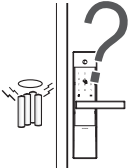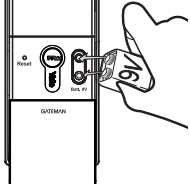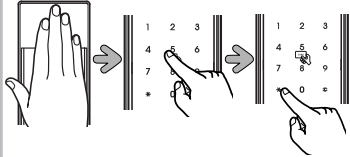- 1 Discharged**

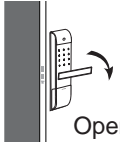- 2 Holding a 9V battery**

- 3 Security code use**

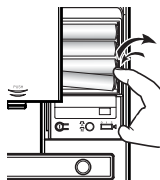
Touch the keypad with the palm. Enter the security code and retouch the keypad or press * button.
- 4 Change Batteries**

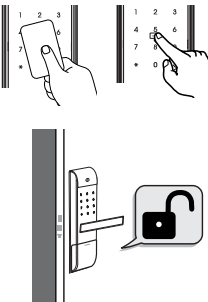
Open the door




Replace all of the batteries
- 5 Confirming**


Check out if a card key and security code work properly after replacing all batteries.

2. Lost card key


If you lose your card, rest of card keys must be re-registered to invalidate missing one.

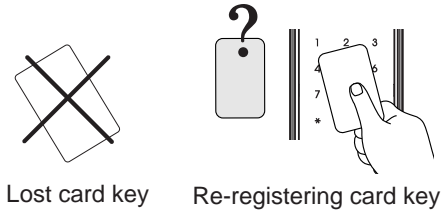

⚠ Caution

Enter the security code in case you lose the card key or you are not carrying it.


It is a user's liability to break the lock because the user did not register any security code.

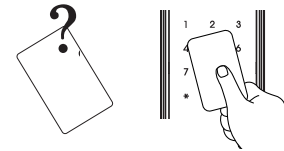

3. Product malfunction

Press reset button located in the left of [emergency power terminal] with a pin and try again with the key or the security code.

If it still does not work, call for after-sales service.

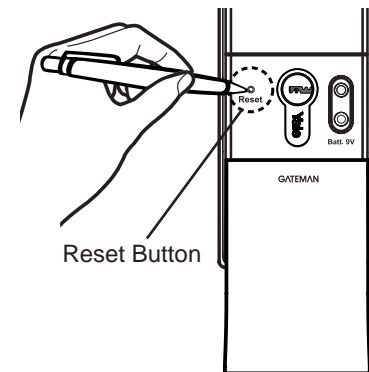


4. Emergency mechanical key override

Please operate the lock with the mechanical key when there is a problem to the lock or unlock the door that is the same as below listed.

- Forgotten security code
- Electronic malfunction

Please slide the cover downward

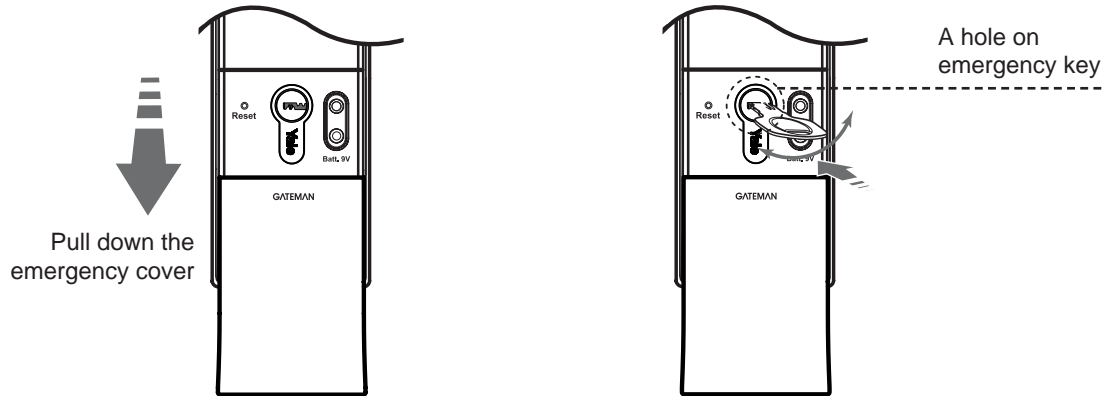

⚠ Caution

- Keep the mechanical override key in a safe place. Otherwise, you may not get a free after-sales service even within during the warranty period.